



**File Name:** bose personal music center iii manual.pdf

**Size:** 2933 KB

**Type:** PDF, ePub, eBook

**Category:** Book

**Uploaded:** 14 May 2019, 12:36 PM

**Rating:** 4.6/5 from 792 votes.

**Status:** AVAILABLE

Last checked: 17 Minutes ago!

**In order to read or download bose personal music center iii manual ebook, you need to create a FREE account.**

[\*\*Download Now!\*\*](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

### Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with bose personal music center iii manual . To get started finding bose personal music center iii manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



## Book Descriptions:

# bose personal music center iii manual

User Manual Changes or modifications not expressly approved by Bose Corporation could void the user's authority to operate this equipment. Operation is subject to the following two conditions 1 This device may not cause harmful interference, and 2 this device must accept any interference received, including interference that may cause undesired operation. All other marks are registered trademarks and trademarks of Bose Corporation. If any part of the product appears to be damaged, do not attempt to use it. Contact your authorized Bose dealer immediately or call Bose Customer Service. Your expansion product might be a speaker system or an AL8 Homewide Wireless Audio Link if you are making a wireless connection. Refer to the owner's guide that came with your expansion product for more information on making this connection. Room Bedroom label Cable On Audio 2. Mute Mute The button has been pressed and the. Source controls. Button group Button function Button Display the iPod Menu from the iPod home display. Go back to the previous menu. Choose a menu item. Volume Change the volume. Skip or fast forward. The LIFESTYLE system turns on, if needed, and begins playing. By assigning a preset number to stations, you can choose them quickly and easily. All of the presets can be used in any of the expansion rooms. Press to go back to the last channel, DVD chapter, etc. Choose from a list of possible rooms to label your music center and distinguish it from any others. See your product registration card for details. Please be sure to fill out the information section on the card and mail it to Bose. Failure to do so will not affect your limited warranty. Please save this guide for future reference. As with any Activates the last used source, which is set to its previous volume and preset, if that apMute all The Mute button has been pressed and held on Go back to the previous menu. Skip or fast forward. Press to skip to the next song or chapter in an audiobook or podcast. <http://dezmaster.com/userfiles/conexant-fusion-878a-manual.xml>

- **bose personal music center iii manual, bose personal music center ii manual, bose personal music center iii remote manual, bose personal music center ii remote control manual, bose personal music center iii manual.**

Press and hold to fastforward a song or video soundtrack. Restart or rewind. Press to stFM Radio Selected source Station Selected preset 2 FM 103.3 Current station Jump to preset Back Tune While listening to a stationAll of the presets can be used in any of the expansion rooms. You can either let the system assign the next available preset number to the station you have tuned in, or you can assign a specific preset number to a statOnce a source in the list has been turned on, you can select and listen to it. You also may have the ability tThe right arrow has the same function as the Last Channel button on the remote con. Click here for more information on the types of cookies we use and how to change your cookie settings. There may be a clear plastic strip protecting the switches. You can remove the strip You will need to change the house code of the expansion remote to match the system. Note The default house code setting is all squares in the down position Please feel free to share additional comments below. To Do this 15 The following controls operate your iPod as described. Button group 16 Playing the radio The radio display While listening to a station, you have several options. To Do this FM 103.3 17 Using radio presets 18 Listening to other sources Listening to a video source 19 1 2 3 4 20 LISTENING TO AN EXPANSION PRODUCT Selecting local sources on your expansion product Controlling an expansion product 21 CHANGING YOUR PERSONAL MUSIC CENTER III SETUP Adjustable features To view or change settings for a feature 22 CHANGING YOUR PERSONAL MUSIC CENTER III SETUP Factory settings are in bold type. laundrytub. in a wet basement. near a swtmming pool. orWider than the other.Do not

changeImportant Safety InstructionsNo 70 provides information with respect to properRefer to the antennaLine Sum —To prevent damage to this productA. the power supply cord or the plug has beenB. objects have fallen or liquid has spilled into theO.<http://globalaji.com/admin/uploads/conexant-manual.xml>

the product has been exposed to rain or water, or. B. the product does not appear to operate normally orE. the product has been dropped or the cabinetAfter any service orBe sure that any replacement parts used have the sameAntenna grounding. Example of antenna grounding as per National Electrical. Lead In Wire. Antenna. Discharge Unit! WEC summary in an. Grounding. ConductorsElectric. Service. Electrode SystemNote to CATV system installer. This reminder is provided to call the CATV system installersThe Mounting. mounting instructions USA. Information about products thatPart 15 of the FCC Rules These limits are designed to provideInstallation of this equipment does cause harmful interferenceOwner's GuideEvaluation Owner's GuideThe lightning flash With arrowhead symbol, within an equilateral triangle, is intended to alertThe exclamation point within an equilateral triangle, as marked on the system, is intended toA CAUTION To prevent electric shock, match Wide blade of plug to Wide slot.Class 1 laser product. This compact disc player is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT label is located on the bariumClass B emissions limits. This Class B digital apparatus meets all requirements of the Canadian InterferenceCausing. Equipment Regulations. Batteries. Please dispose of used batteries properly, following any local regulations. Do not incinerate. Additional safety information. See the additional instructions on the Important Safety information page enclosed with thisPlease read this owner's guide. Please take the time to follow this owners guide carefully. It will help you set up and operateSave your owners guide forLifestyle 50 system. Where to find. Setting Up. Before you begin. Unpacking the carton. Connecting your system. Connecting your home theater components to the Lifestyle system. Other connections. Connecting the antennas. Connecting power to your system. Setting up the personal music center. Operating Your Lifestyle' 50 System.

The personal music center display. Listening to the radio. Listening to compact discs. Listening to home theater sound. Using the system with external components. Operating a Multiroom System. Connecting additional rooms. Operating more than one room. Cleaning the Lifestyle 50 system. Replacing batteries. Using the personal music center "find me" feature. Troubleshooting. Warranty period. Customer service. Product Introduction. Technical information. AccessoriesBose" Corporation. For your records. Serial numbers are located on the bottom panels of the personal music center, multiroomPersonal music center serial number. Multiroom interleave serial number. CD changer serial number. Acoustic bass module serial number. Dealer name. We suggest you keep your sales slip and warranty card together with this owners guide. LifestyleSOsystem 3. Thank you for purchasing the Bose Lifestyle" 50 system. Years of research bring you thisTechnological innovations that make the Lifestyle 50 system uniqueThe personal music center is a clear departure from convention it has no cables. Since theBose Jewel Cube speakers are also far from the conventional. Proprietary Bose technologiesThe other elements of the Lifestyle 50 system are designed to be hidden from viewDVD, digital TV. nextgeneration cable boxes and satellite receivers. For all analog formats. asYour Lifestyle 50 system is. DVD, digital TV, and digital cable boxes and satellite receivers. VCRs. stereo TVs, cable boxes and satellite receivers. Videostage decoding directs stereo information to the surround channels, so the sound ofVideostage decoding delivers live greatsounding channels, even when the originalThese, and numerous other innovations, bring you the Lifestyle 50 system, offering superbPlease take the time to follow this owners guide carefully. It will help you set up and operate. Save your owner's guide forDolby Laboratories Licensing Corporation. Lifestyle 50 system. Unpacking the cartonWhat comes with your.

<http://www.drupalitalia.org/node/79036>

Lifestyle" 50 systemCarefully unpack your system. Save all packing materials for possible future use.

The Note Find the serial numbers on the bottom panels of the personal music center, multiThen wrtte them on your warrantyWARNING The Acausllmass module weighs 33 pounds 15 kg. Use good liting. WARNING To avoid danger of suffocation, keep the plastic bags out 0! the reach ofPersonal musc oentor. Rubber feel 4. Aoooulsirnass module. Rubber leet a" Figure 24. Selecting a station to store. Figure 25. Alter storing a station asYou can use the PRESETS MENU to set presets. PRESETS Is only available in the MENU listPress the MENU button until PRESETS is displayed. It a number is ashing in the PRESEI display indicating that this station has not been preset,Or, select a different stationSelect the statlon you went to preset. ThenUsing the PRESEIS MENU allows you to do additional preset management, making it easierAny station can be assigned to more than one preset number. Or, you can reserve different number groups for different types of stations. For easy referEraslng a preset station. To erase a preset station.Select the frequency or preset numberIn addition. to erase a preset statlon In locations 1 through 9, you can use quickstore fromNote When all 25 FM or 25 AM preset locations are filled, and you hold down the areaOperating Your. Figure 26. Loading and ejecting a CD. Figure 27. Loading and unloading the CDUsing the CD changer. You can load up to six compact discs at a time. Loading discs into the CD magazine. Hold the magazine, looking at the side with the arrow. Insert up to six discs, label side upNote the slot numbers 1 through 6,CAUTION Do not insert more than one also into any slot Forcing two discs into one slotCD changer. Note If a disc is upsidewdown, it does notplay The display ashes the disc number. Eiecting discs from the CD magazine. Press the white lever that corresponds to the disc you want to eject.

<http://erptrends.com/images/car-service-manual-download-free.pdf>

This ejects the disc farLoading the CD magazine into the CD changer. Open the CD changer door. Insert the CD magazine fully into the CD changer, following theEisetng the CD magazine from the CD changer. Press the EJECT button, at the lower left of the magazine slot, to remove the magazineEject button. LilostyieSasystem 25. Operating Your Lilestyl. Figure 28. The CD displayTurning the system on and choosing the CD player. Press the CD button to turn the system on and select the CD player.CD appears in the source display area. It a CDThe CD display provides information In three main areas, each with left and right arrowPause a CD PAUSE II and II ashes. Pause changes to stop after 10 minutes. Unpause a CD PAUSE II, PLAY b, STOP I, CD, or OFF. Stop a CD STOP I. After pressing STOP I, the display briefly shows the total time.Go to next track TRACK display right arrow button. Skipping to the next track wraps from the last track back to the rst of the current disc. You can skip tracks while paused. Go to beginning of current track TRACK display left arrow button. Go to previous track TRACK display left arrow button twice. In RANDOM mode, skips to previous track played. Skipping back from the rst trackPlay another disc DISC display left or right arrow button. In PLAY mode, selects the next or previous disc; in RANDOM mode, randomly selectsScanning up or down stops at the ends at the disc. You can scan a CD while paused. Note To prevent excessive wear on the CD mechanism, unattended CD play or randomTo leave music playing unattended for longerThe personal music center display provides the following information about the CD changerLilestyle so system. To prevent a track from playing, press the OMIT TRACK button. The track is skipped and isIncluding omitted tracks. Omitted tracks are indicated by OMITTED next to the right TRACK arrow.OMITTED lc INCLUDED.Display showmg an omittedTrack 8 is Use to cancel.

<http://ersanteknoloji.com/images/car-service-manual-online.pdf>

OMITTED OMUTEDDisplay showing omitted lack I Domit hack 8Limryis 50 system 27. Using the CD OPTIONS MENU. Press the MENU button until CD OPTIONS ls displayed.CD options screen while CD is up,EH 8 Wms a "aCD programming repeat options. Random and Nepal modes. Repeat modes allow you to play CDs for 24 hours or until you select STOP I or OFE Press. DONE to accept your settlngs.By selecting CD LIST rst the following random and repeat options play your programmed. CD list the same way they play a discj" Note. If you select random and repeat modes that cannot be

combined REPEAT TRACK Opera ng Your Lifestyle“ 50 System. CD Programming Vou can edit a CD In the CD OPTIONS MENU Figure 31, press EDIT CD LIST to begin creating your CD play. lisl. Flynn 32. Beginning CD programming Ready for rst To add The track and disc numbers Figure 33. CLEAR and CLEAR LIST age Repeat selecting disc and track numbers The display offers dashes for the track Lfeslyfe SO system 29. Opera 9 Your Lifestyle 50 System. Figure 34. Ready to play CD LIST The item number begins ashing PLAY list play. Press the CD LIST button to play your CD list. CD, it is skipped while the list plays. To erase the entire list, press the CLEAR LIST button in the CD OPTIONS MENU, and conrm Lifestyta 50 system. Listening to home theater sound BuiltIn Dolby Digital AC3 decoding delivers Dialogue remains locked on screen. Listening to digital sound. Turning the digitli audio source on. Turn on the DVD player, digital TV. Be sure to load the DVD disc Turning the system on and choosing digital sound. Press AUX on the personal music center to turn your system on to play digital sound. Sei octing listening material. To select material with compatible digital audio bll streams, look for the terms POM or Dolby. Digital, or the symbols ml or. on DVD Video discs. Your Lifestyle“ 50 system cannot. To select surround encoded analog or digital audio material, look for the terms Surround or. Ing a TV broadcast.

You can listen to any program material in SURROUND 5 speaker mode, although you may Some monaural and stereo matenals will Even with surround encoded Operating Your Lifestyle 50 System. Speaker Dplions and center and Figure 35. VIDEO 1 wilh FILM BASS Press the MENU button until SPEAKERS Is displayed. The SPEAKERS MENU allows you to Select lny number a! speaker Adjusting center and surround levels. The center and surround adjustments are remembered for the room in which they were used. The levels are factory preset at zero. Use the arrow buttons to adjust the levels. Using film bass for movie soundtracks. While uslng AUX, VIDEO 1, VIDEO 2, and TAPE, you can select lm bass, an enhanced bass Press FILM BASS to turn You can turn it on for Operating Your Lifestyle“ 50 System. Figure 37. The RECORD OUT MENU Follow the instmctions on page 15 for connecting components. Turn on your component directly or by using its remote control. Use VOLUME A or V on your Note The Lifestyle 50 system cannot tum a connected component on or off. Turning the system on and selecting the component. Press VIDEO 1, VIDEO 2, AUX, or TAPE on your personal muslc center to select the desired The appropriate display indicator appears when the system is on and the component is Using a tape recorder with your system. To record on a connected tape deck, use the MENU button to select RECORD OUT. You can The signal of the selected source ls directed to the. RECORD OUT lacks even it you are not listenan to that source thle recording. The selected source ls displayed In place of the dashes. The dashes reappear It selected for. RECORD OUT, the CD player shuts oft after 24 hours. RECORD OUT is shown on the dlsplay when a source to which you are listening is also S mu mmw. Note If you do not use the RECORD OUT option from the MENU, the source playing is. In a mumroom system, the source in the lowest con When you are ready, set the tape deck to record. Utsstylai syslsm 33. Finetuning your system. Figure 38.

[www.insurancedirectcanada.ca/wp-content/plugins/formcraft/file-upload/server/content/files/1626e60801b558---bosch-gws-26-230-jbv-manual.pdf](http://www.insurancedirectcanada.ca/wp-content/plugins/formcraft/file-upload/server/content/files/1626e60801b558---bosch-gws-26-230-jbv-manual.pdf)

Bass and treble controls If desired, you can further finetune your system as described here. Adjusting speaker controls. The Lifestyle 50 system TREBLE and BASS controls are located on the Acoustimass You can also locate the normal setting by feeling when the control settles into the notch at Compensating for room acoustics. The acoustics sound qualities of your room can affect the overall sound quality of any Too much or too little treble. Rooms with too few sound absorbing furnishings, especially those with bare floors and walls, Rooms with a lot of sound absorbing furnishings, such as upholstered furniture, wall to wall Moving speakers You can increase treble sound by slightly. Too much or too little bass. You can decrease bass sound by turning down the bass control toward —. To increase bass. Acoustimass module placement affects the amount of bass you hear. Placing the module Moving the module away from the comer Compensating for movie soundtracks. When a movie



soundtrack is played in a motion picture theater, its basis restored to the fullTo perform the same way in your home, your. AUX, or TAPE modes, use the FILM BASS button to select between standard and Lifestyle so system. Operating Your Lifestyle 50 System. Adjusting signal levels. This setting allows you to adjust and equalize the signal level of sources that are not built-in—Press the MENU button until SIGNAL LEVELS is displayed.You can watch itAfter listening to theFigure 39. Signal levels options while inYou can adjust the contrast on the touchscreen. Hold down the SOURCE button for vePress the lower arrows to select the contrast levelFigure 40. LCD contrast adjustmentAdjusting the personal music center beep. You can adjust the sound made by the touchscreen to acknowledge a button press. HoldUse the upperUse the arrow buttons to select between Lo, HI,Figure 41. Beep adjustment displayConnecting additional rooms. Follow the placement guidelines for the Bose powered speakers that you plan to connect.

Then review your plan for how to connect these speakers to the multiroom interface In yourA CAUTION Make sure all components are unplugged from the power outlet before youConnect the audio input cable from your additional powered speakers to the selected ROOMROOM 8, C, or D on the back of the Interface.J" Note Be sure that each connector is inserted completely into each jack.HOOMjacks on the multiroomRoom A, B, C, and D jacks. JN Note. If you connect Bose powered home theater speakers, the system automatically offersPress the FILM BASS button to turn it on or all, FILM BASS is on when you select VIDEO 1 or 2 orAUX. Since SPEAKER options and FILM BASS do not apply for stereo use, these controls are notOperating a MultiRoom Lifestyle 50 System. Your Lifestyle 50 system is able to control up to four rooms of speakers. These rooms areWhen you have two or more rooms connected, you can play the same or different sources inShared source When two or more rooms are listening to the same source, they are sharingLinked rooms When two or more rooms are linked, they function as if they were one room. ifKeep In mind that there are limits to using different sources In different rooms. With one tuner,Similary, with one CD player, theUsing the ROOM button. Use the ROOM button to select one or more rooms to control.The displayUse the following examples of fourroom systems to understand the sequence of ROOMExample 1 Room A FM on, Rooms 5 and C CD on, Room B off. Button press Display shows. Starting illExampleZRoomsA and C FM on, HumtBandD CDon. Starting CLllestylfe so system 37. Operating a MultiRoom Lifestyle 50 System. Using the HOUSE button. Use the HOUSE button to control all connected rooms together. Press HOUSE to see emptyEigun 43. Pressmg the HOUSE button withFigure 44. Pressing the HOUSE button and. FM in fourroom system.

J" More Press the HOUSE button before each different command to apply that command to allThe only MENU items available while in HOUSE mode are CLEAN SCREEN and CD 0. TIONS CD programming. Pressing HOUSE and a source turns all rooms on in this source. The display ll the emptyPressing HOUSE and VOLUME changes the volume of all rooms that are on. When youThe system adjusts thePressing HOUSE and MUTE mutes all rooms that were on.Any rooms that wereThe individual roomsPressing HOUSE and SLEEP applies the SLEEP mode to all rooms that were on. Pressing HOUSE displays empty boxes for all connected rooms. Pressing SLEEP shows allThe SLEEP time selected applies to all the rooms that were on even if they were playingYou can accept this time or Change It for all the rooms. SLEEP, CLEAR, and DONE. Note You can set different sleep times for individual rooms by using the ROOM button toRegardless of how many rooms are on.Canceling HOUSE mode. If you do not press any additional buttons after pressing HOUSE, pressing HOUSE againUnlinking room. After you have linked the rooms using the HOUSE button or by selecting the group of roomsThis room is now removed from the linked group. Using more than one personal music center. To operate a multimom system, you may want to add personal music centers In the addiTo add a new personal music center to your system, follow the setup instructions on page 17. Be sure to Install the batteries and turn it on for the rst time within three feet of the multi—LlfestyfeSa system 39. Cleaning the Lifestyle 50 system. Figure 45. Entering the CLEAN SCREENFigure 45. Handling %. Figure 47. Cleaning a CDFor information on replacing the

personal music center batteries see page 17. Cleaning the touchscreen Press the MENU button until CLEAN SCREEN is displayed. Press the DISABLE KEYS button Press DONE to exit from CLEAN SCREEN or press. MENU to select another menu item. You can use an ammonia-free window cleaner on a soft cloth to wipe the screen. Handling CDs.

Handle discs by their edges to prevent fingerprints and scratches Figure 46. To remove stains or fingerprints from the surface of a disc, use a soft, lint-free, dry cloth. Wipe Do not use any Do not write on, or attach labels to the surface of the disc. To minimize exposure to dust and dirt, replace discs in their cases after use. Store each disc Cleaning the CD changer. Use only a soft cloth to clean the outside of the CD changer. Do not use any solvents, chemicals, or cleaning solutions containing alcohol, ammonia, or Do not use any sprays near the Cleaning the speakers and Acoustimass module. Clean the surface of your speakers with a soft, damp cloth. You can use an ammonia-free Do not use any sprays near the system. Do not use any solvents, chemicals. The speaker grille panels require no special care. CAUTION If liquids get into the product, turn the system off and allow it to air dry. Then turn the system off so the system can dry. There are five successive levels of warnings to alert you to replace the personal music center Figure 48. The most severe low battery See page 17 for Using the personal music center "find me" feature. Press the LOCATE. CONTROLLER button on the back of the multiroom interface under the antenna connector The personal music center begins beeping You can stop the beep by touching Figure 49. The LOCATE CONTROLLER LOCATE CONTROLLER button. LifeMeW system 41. Problem. System does not function What to do This allows the AUDIO INPUT jack. Make sure to select the correct No sound from Too much sound No sound from Surround speakers Personal music center See pages 17 and 39. Then turn on the personal music Problem. CD does not play. Radio does not work. FM sound is distorted. Sound is distorted. No tape, CD, VCR, Warranty period. What to do Display shows need if no Clean the CD. See Figure 46. Call Bose Product Support see inside Use SIGNAL LEVELS MENU to determine Please call out the For additional help in solving problems, contact Bose customer service.

See the inside back LifeMesos system 43 Technical information. Accessories Multiroom interface Europe 230V 50 Hz 19VA. Australia 240V 50 Hz 19VA. Multiroom interface inputs. TAPE 2Vrms, maximum. AUX, VIDEO 1, VIDEO 2 2Vrms, maximum. FM antenna 750. AM antenna 12uH. Multiroom interface outputs. TAPE video audio. ROOM A, B, C, D autoadjusting fixed or SERIAL DATA for future use. ROOM connector pinouts Personal music center Dimensions. Personal music center Multiroom interface CD changer Jewel Cube speaker Acoustimass module Weights. Personal music center Multiroom interface CD changer Jewel Cube speaker Acoustimass module Total shipping weight Finish. Personal music center. Polymer, painted. Multiroom interface. Polymer. CD changer. Aluminum. Jewel Cube speakers. Polymer, painted. Acoustimass module. Vinyl veneer, Polymer. To find out about mounting brackets, stands, CD magazines, and connecting additional. Bose powered loudspeakers, contact your Bose dealer.

<http://www.drupalitalia.org/node/79037>